

RADIONETTE


RNCD 329 Personal CD player

Operating guide



Before operating,
please read all these
instructions thoroughly.

Radionette RNCD 329 Personal CD player

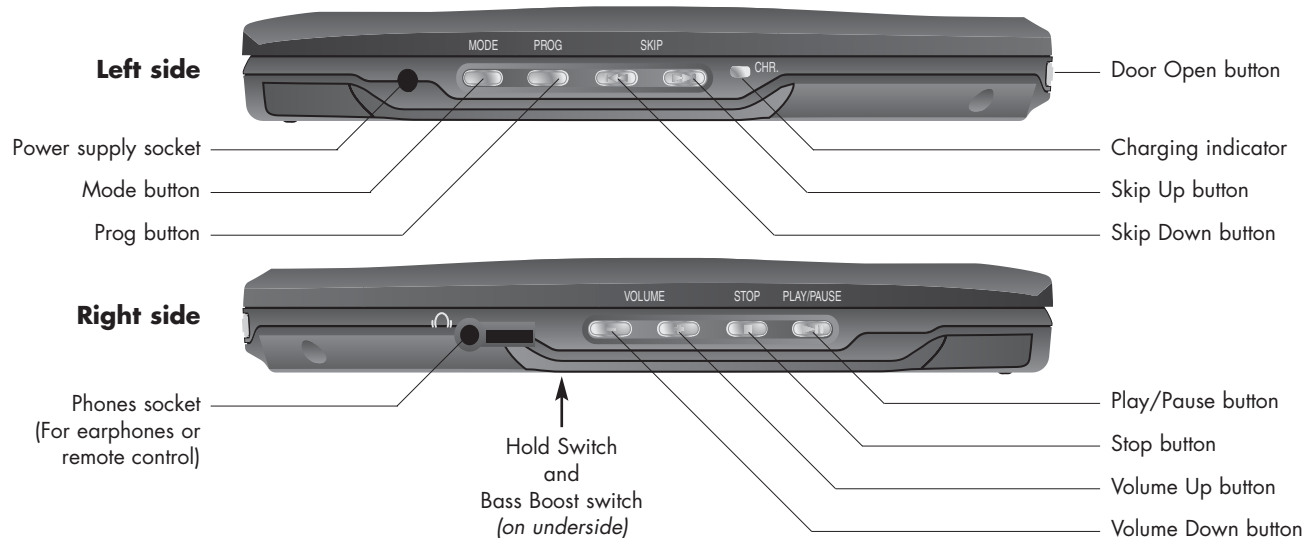

Wire remote control



The safe use of your personal CD player



In the interests of safety, you are advised not to listen to your unit whilst engaging in activities where the exclusion of external sounds, (whistles, horns, sirens etc.) could be hazardous. Accordingly do not listen to your unit while driving a car, cycling or crossing the road.

Using headphones at high volume for extended periods of time may damage your hearing.



Never use your CD player if it is damaged in any way. Do not open any fixed covers and do not repair yourself. Repair work must be carried out by a competent engineer.



Moisture - Do not allow your CD player to be exposed to rain, moisture, dust. If any liquid is spilt into your unit it can cause serious damage. Contact your store immediately. This appliance must not be exposed to dripping or splashing.



Class 1 laser product - This compact disc player is classified as a ***class 1 laser*** product.

*The ***class 1 laser*** product label is located on the bottom of this product.*

Do not use the product differently from the procedures given in this book otherwise you may be exposed to hazardous radiation.




Temperature - Avoid extremes of temperature, either hot or cold, place your CD player well away from heat sources such as radiators or gas/electric fires.




Batteries are easily swallowed by young children. Do not allow young children to play with your CD player. Never let anyone, especially children push anything into holes, slots or any other openings in the case; this could result in a fatal shock.

Charging the batteries

Your CD player uses 2 'Gum Stick' Ni-MH rechargeable batteries (included). Average playing time with fully charged batteries is approximately 5 hours. Changing discs or repeatedly stopping and starting will reduce playing time.

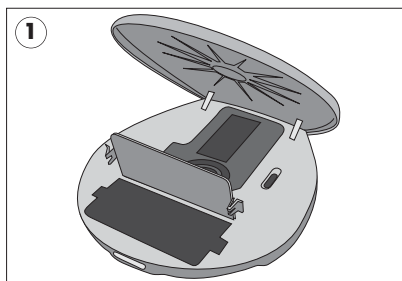


Open the CD door by sliding the **Open** button to the right. Open the battery compartment door by gently squeezing the two clips, then lift the door.

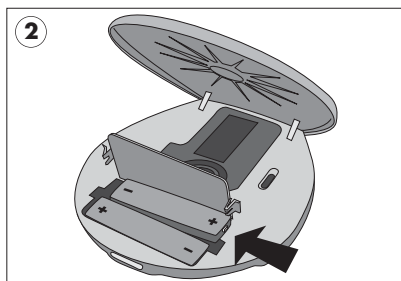


Insert the two batteries supplied, making sure the polarity is correct as shown on the diagram in the battery compartment. Close the battery compartment.



Insert the DC jack plug into the Power Supply Socket.

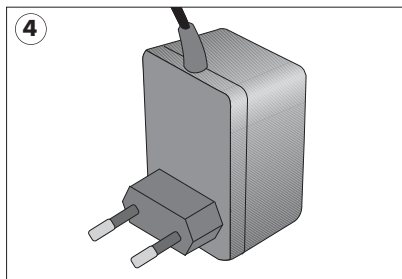

Plug the AC adaptor into a suitable mains outlet.

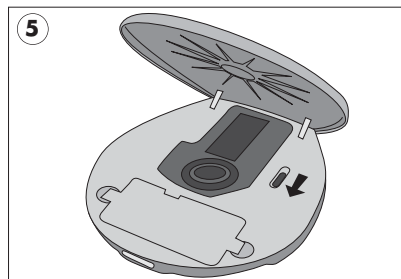

Set the **Charge** switch to ON. The Charging Indicator will light to show that the batteries are charging.

NOTE:



The battery symbol will appear in the display on the remote control when the batteries need charging. The batteries can be fully recharged in 15 hours.

Do not charge continuously for 24 hours or more as this can affect the performance of the batteries.

Listening to a CD

You can use your CD player with or without the wire remote control.



To use your CD player without the wire remote control, plug the earphones jack plug directly into the Phones socket.



To use your CD player with the wire remote control, plug the remote control jack plug into the Phones socket.


Plug the earphones jack plug into the jack socket on the remote control.




Using headphones at high volume for extended periods of time may damage your hearing.
Always make sure the volume is at a low level before putting the earphones in your ears.

How to play a CD


Do not open the CD lid whilst a disc is playing. When removing a CD make sure the disc has stopped spinning before opening the disc door. If you do not you may damage the disc by scratching it.

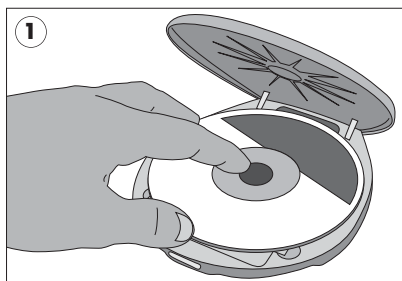


Insert a disc with the printed label side facing up, gently push down onto the centre hub. Close the door (there will be a click).

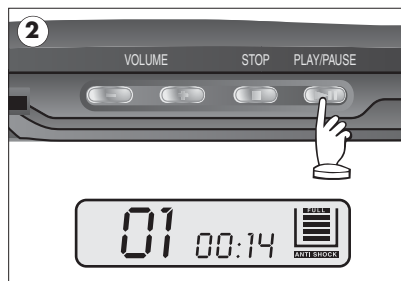

Press the **PLAY/PAUSE** button to start playing the CD. The display will show the track number and the time played in minutes and seconds.

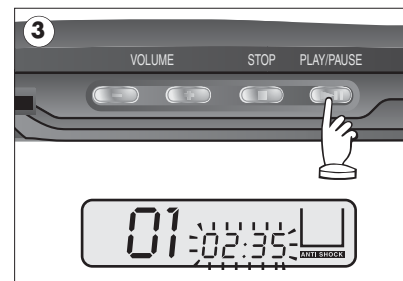


Press the **PLAY/PAUSE** button to pause the CD. The display will flash. Press the **PLAY/PAUSE** button again to continue play.

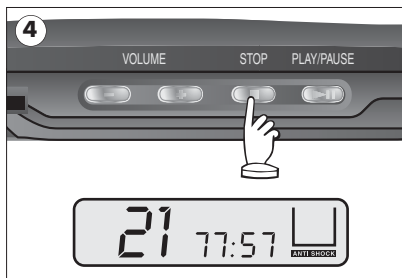

Press the **STOP** button to stop the CD. The display will show the number of tracks and the total playing time. After 30 seconds the CD player will switch off.


NOTE:

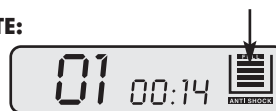


The Anti-Shock symbol appears 'empty' when you start playing a CD. As the CD plays the symbol 'fills up' to show that data is being stored in the memory. This ensures that sound is not interrupted, even if the player is jogged.

If the player is subject to repeated knocks then the memory will begin to empty and eventually the sound will be interrupted.

Skip and Search features of your CD player

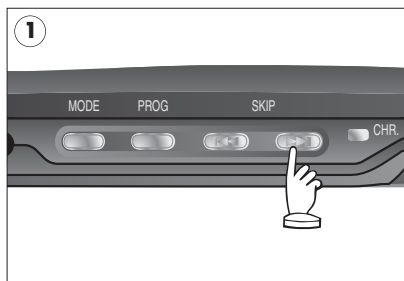


Press and **release** the forward **SKIP** button to advance one track. Press and **release** the backward **SKIP** button once to restart the current track or twice to go back one track.

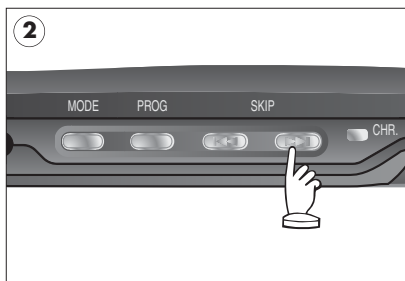


Press and **hold** either of the **SKIP** buttons down to audibly **SEARCH** through a track.

How to play selected tracks from a CD


Using the **PROGRAM** feature you may pre-select the order in which a series of tracks of a CD will be played. You may programme up to 20 tracks. If the Program function does not work check the hold button (see page 11).

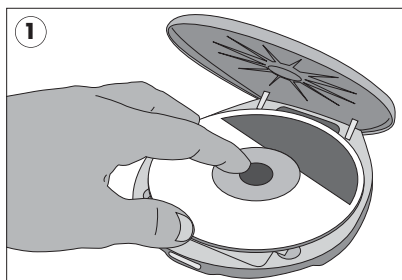


Insert a CD as described on page 6 and start playing.

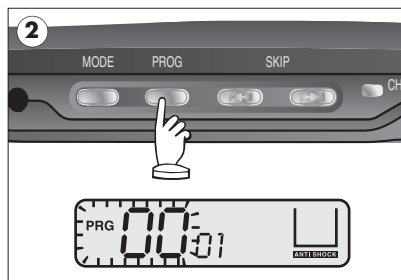


Press the **PROG** button during play or pause mode **PRG** flashes in the display.

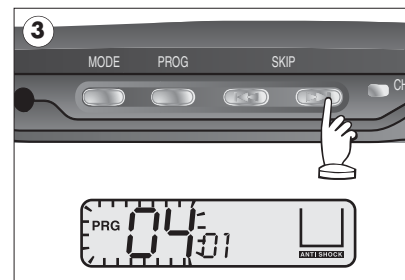


Use the **SKIP** buttons to select the desired track. Press the **PROG** button to store your track.

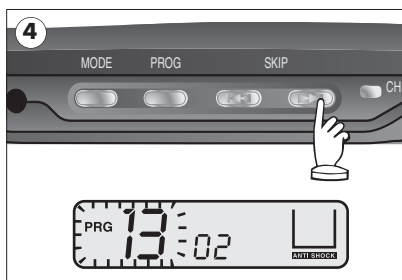

Repeat stages 2 and 3 to enter all your required tracks.

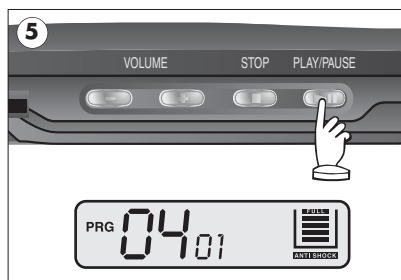


Press **PLAY/PAUSE**. **PRG** will be displayed, and play will start with the first track in your selection.

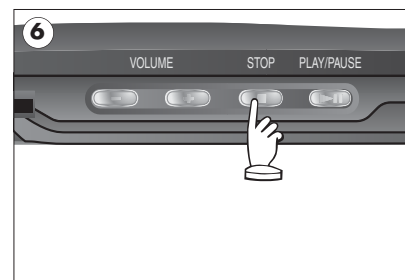


To erase your programme press **STOP**.

Intro and Random play

INTRO will play the first 10 seconds of each track on the CD.

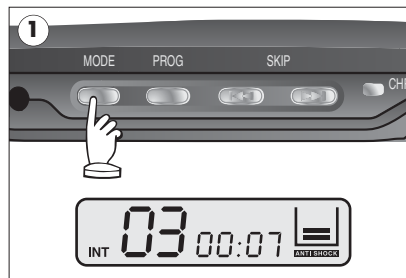


Press **MODE** THREE times. Press **PLAY/PAUSE**. **INT** is displayed and the first ten seconds of each track will be played in turn.

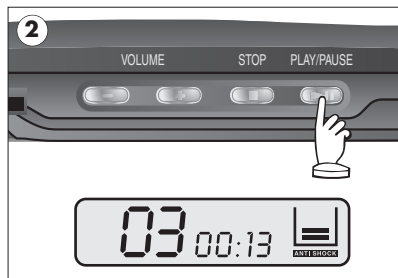


To cancel press **PLAY/PAUSE**. The current track will continue to play.

The **RANDOM** feature allows tracks to be played in a random order.

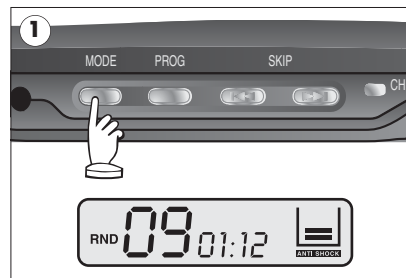

Press **MODE** FOUR times. Press **PLAY/PAUSE**. **RND** is displayed and random play begins

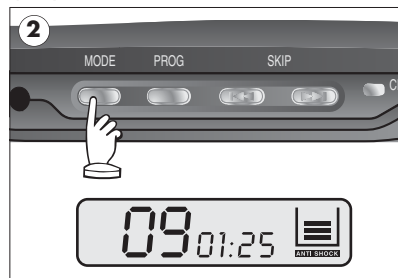


To cancel press **MODE**. The current track will continue to play.

If STOP is pressed or if the lid is opened, all settings will be lost.


Repeat play

REPEAT 1 will play the current track continuously. REPEAT ALL will play all tracks on the CD continuously. If the Repeat function does not work check the Hold button (see page 11).

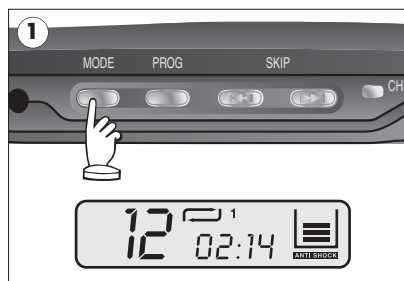


With a CD playing press **MODE** ONCE.

1 appears in the display. The current track will be played repeatedly.

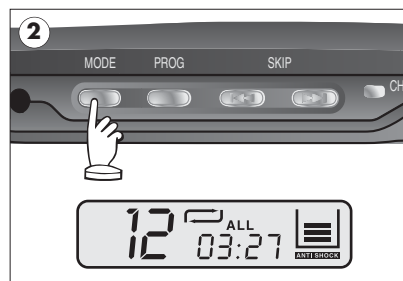

With a CD playing press **MODE** TWICE.


ALL appears in the display. The whole CD will be played repeatedly.

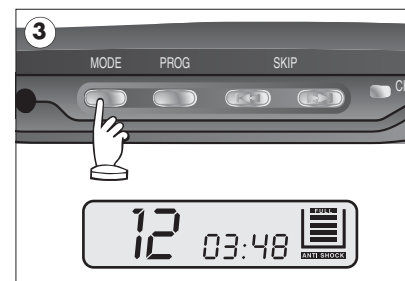


To cancel repeat play press the **MODE** button until no repeat function is shown in the display.

Bass boost and locking the controls

The **BASS BOOST** feature will enhance the bass output of your CD player.

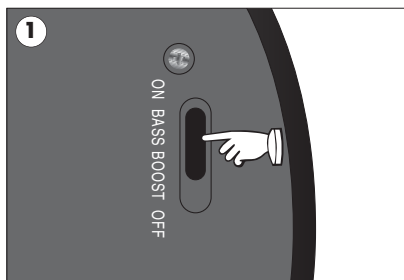


Slide the **BASS BOOST** switch, on the underside of the unit, to the **ON** position

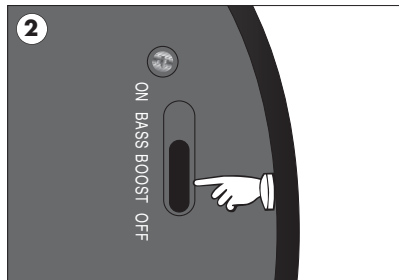

BASS BOOST may cause the sound to distort. If this happens turn down the volume or switch bass boost **OFF**.

While the **HOLD** feature is ON the playback controls are held on their current settings - this feature is useful if you don't want to accidentally change track or stop the CD playing and can also be used as a travel lock.

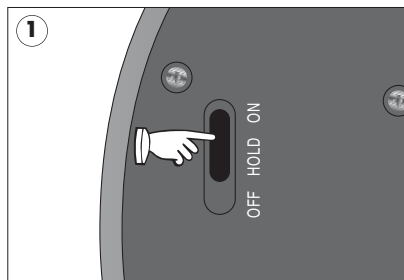


Slide the **HOLD** switch, on the underside of the unit, to the "**ON**" position to avoid accidental pressing of the controls.



If none of the keys seem to operate check that the HOLD control is not switched to ON.


Troubleshooting Guide

Symptom	Cause	Solution
System does not turn on.	Batteries may need charging.	Recharge the batteries
System is on but no sound.	VOLUME control is at "minimum" position.	Adjust the VOLUME control to a higher sound level.
A CD is in place but will not play.	CD is inserted incorrectly.	Make sure the CD is inserted with the printed side facing outwards.
CD skips.	CD is dirty.	Clean the CD as described. Do not attempt to play a CD which is damaged.
	The system is subject to vibration.	Place the system in a more secure place. Vibration or jarring will cause the CD to skip
None of the controls will work	The HOLD switch is in the ON position	Switch the HOLD function to OFF.

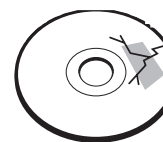


Never use a CD if it is cracked, deformed or has been repaired with tape or adhesive.

When you have finished playing a CD, remove it from the CD player and store it in its protective case.

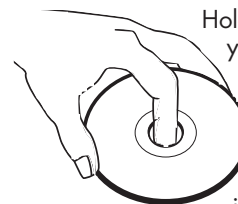


Hold CD so that you do not touch the playing side (the side with no label or printing on it).

To clean the playing side of a CD of finger prints and other dirty marks gently wipe the CD with a soft lint free cloth from the centre of the CD outwards.

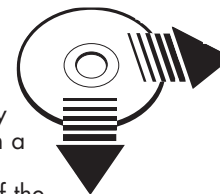

Cleaning and maintenance

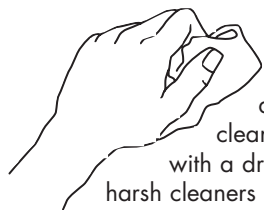

To clean the case of your unit use a soft damp cloth. After cleaning wipe the case with a dry cloth. Never use harsh cleaners or solvents.

CLEANING THE LENS

If the lens is accidentally touched with a dirty finger or dust settles on the lens it must be cleaned. Blow on the lens a few times with a blower available from photographic shops. Brush the dust away then blow on the lens again.

Specifications

AUDIO

Frequency response

20-20,000Hz

No. of channels

2 Channel (stereo)

Output level

Phones : 15mW (32 ohms)

Bass boost effect (100Hz)

+8 dB

GENERAL

Power requirements

2 x 1.2V 1200mAh Gum Stick Ni-MH rechargeable battery

Power consumption

DC in 6V 500mA (centre positive)

Dimension

0.8W (DC 2.4V) under normal condition

Weight

Approx. 128 (W) x 18.3 (H) x 143 (D) mm

Approx. 200 g not including battery